

# USER MANUAL

## SDV2

PTN DVI Distribution Amplifier 1x2



Version: SDV22013V1.1

**NOTICE:** Please read this user manual carefully before using this product.

This manual is for operation instruction only, not for any maintenance usage. The functions described in this version are updated till May 2013. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

This manual is copyright PTN Electronics Limited. All rights reserved. No part of this publication may be copied or reproduced without the prior written consent of PTN Electronics Limited.

**All product function is valid till 2013-05-28.**

## Update History

Version	Date	Update Content
1.0	2010.10.12	First version.
1.1	2013.05.28	Modified the system diagram.

---

**Table of Contents**

1. Introduction ..... 1  
    1.1. Introduction to SDV2..... 1  
    1.2. Package Contents ..... 1  
2. Features ..... 1  
3. Specification ..... 1  
4. Interface Introduction ..... 2  
5. System Diagram..... 3  
6. Troubleshooting & Maintenance..... 4  
7. Safety Operation Guide..... 4  
8. After-sales Service ..... 5

# 1. Introduction

## 1.1. Introduction to SDV2

SDV2 is equipped with high-quality 1 input, 2 outputs distribution chip, perfect matching with outside devices and anti-static function enable the advantages over others in distributing DVI signal.

It is a DVI 1 x 2 distribution amplifier with DVI-I connectors, HDCP compliance, HDTV compatible, up to 1920x1200@60Hz.

## 1.2. Package Contents

- 1 x SDV2
- 1 x Power adapter(DC 5V)
- 1 x User Manual

**Notes:** Please confirm if the product and the accessories are all included. If not, please contact with the dealers.

# 2. Features

- Support 3D &1080P, HDTV compatible.
- Ultra-switching for instaneous display.
- Built-in re-clock technology for each output.
- Built-in gain compensation and sync signal proofread technology.

# 3. Specification

Video Input		Video Output	
Input	1 DVI	Output	2 DVI
Input Connector	Female DB24+5	Output Connector	Female DB24+5
Input Level	T.M.D.S. 2.9V/3.3V	Output Level	T.M.D.S. 2.9V/3.3V
Input Impedance	50Ω	Output Impedance	50Ω
Video General			
Gain	0 dB	Bandwidth	6.75Gbit/s
Video Signal	DVI 1.0 standard DVI-D full digital T.M.D.S signal HDMI 1.4a	Max Time-delay	5nS (±1nS)
CMRR	>90dB @20Hz~20K Hz	Maximum Pixel Clock	165 MHz
Resolution Range	Up to 1920x1200 or 1080p @ 60 Hz		
HDCP	Compliant with High -bandwidth Digital Content Protection (HDCP) using DVI and HDMI 1.4a standards		
EDID and DDC Management	Supports Extended Display Identification Data (EDID) and Display Data Channel (DDC) data using DVI and HDMI standards, EDID and DDC signals are actively buffered.The		

built-in EDID/DDC database can analyze these two signals, mix them, and realize the handshake of them internally.

## General

Power Supply	DC 5V	Power Consumption	3W
Temperature	-20 ~ +70°C	Humidity	10% ~ 90%
Case Dimension	W134 x H77 x D28 mm	Product Weight	0.4Kg

## 4. Interface Introduction


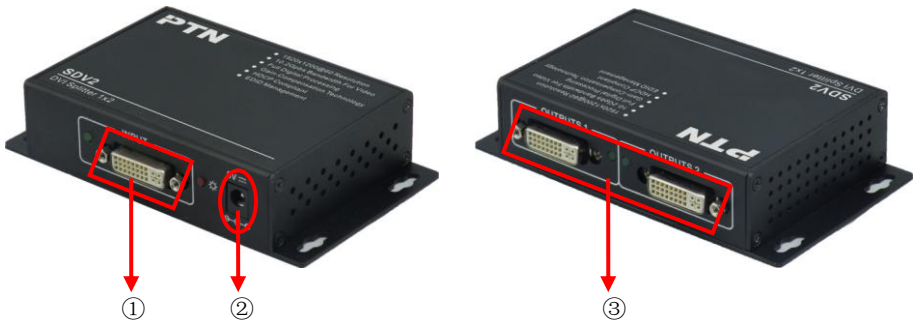


Figure 5-1 Interfaces of SDV2

No.	Name	Description
①	DVI INPUTS	DVI input port. Female DB24+5 connector.
②	DC 5V	Power interface, accessing with a DC5V power.
③	DVI OUTPUTS	DVI output ports, 2 in total, female DB24+5 connector.

### 5. System Diagram

#### DIAGRAM

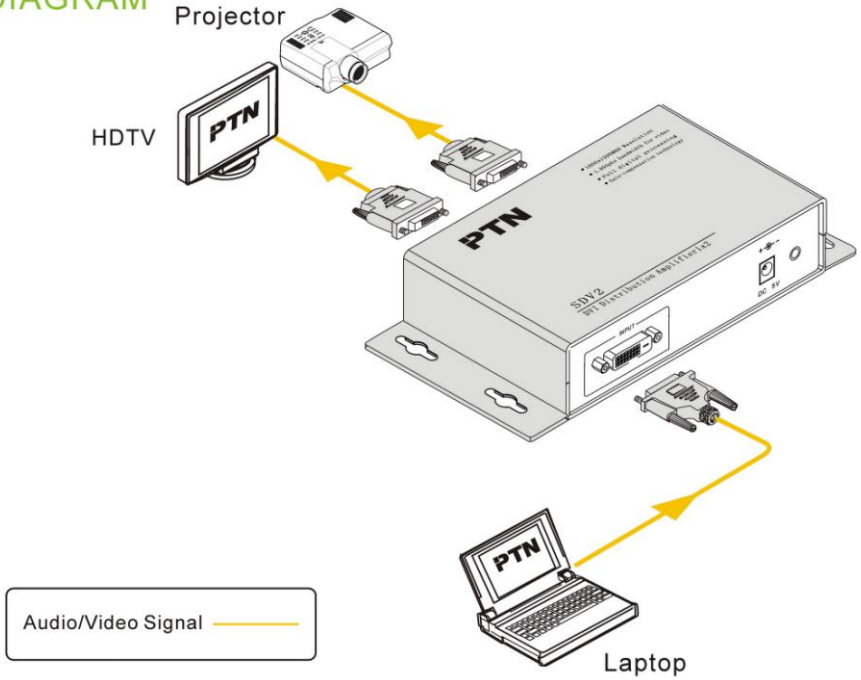

## 6. Troubleshooting & Maintenance

- 1) When there is no output images:
  - Check if there is any signal at the input.
  - Check if there is any signal at the output.

We can check these by using an oscilloscope or a multimeter. If there is no signal input/output, maybe the input/output cables broken or the connectors loosen, please change for another cable.

- If not the problem mentioned above, probably there is something broken inside the unit, please send it to the dealer for repairing.
- 2) If the **POWER** indicator doesn't work or no respond to any operation, please make sure the power cord connection is good.
  - 3) If the output image is interfered, please make sure the system is grounded well.
  - 4) If the static becomes stronger when connecting the DVI cables, it probably due to the incorrect grounding, please correct it otherwise it would damage the splitter.

## 7. Safety Operation Guide

In order to guarantee the reliable operation of the equipments and safety of the staff, please abide by the following proceeding in installation, using and maintenance:

- 1) The system must be earthed properly. Please do not use two blades plugs and ensure the alternating power supply ranged from 100v to 240v and from 50Hz to 60Hz.
- 2) Do not put the splitter in a place of too hot or too cold.
- 3) As the power generating heat when running, the working environment should be maintained fine ventilation, in case of damage caused by overheat.
- 4) Cut off the general power switch in humid weather or left unused for long time.
- 5) Before following operation, ensure that the alternating current wire is pull out of the power supply:
  - Take off or reship any components of the equipment.
  - Take off or rejoin any pin or other link of the equipment.
- 6) As to non-professional or without permission, please **DO NOT** try to open the casing of the equipment, **DO NOT** repair it on your own, in case of accident or increasing the damage of the equipment.
- 7) **DO NOT** splash any chemistry substance or liquid in the equipment or around.

### 8. After-sales Service

- 1) We offer products for all three-year warranty, which starts from the first day you buy this product (The purchase invoice shall prevail).
- 2) If there appear some problems when running SDV2, please check and deal with the problems reference to this user manual. Any transport costs are borne by the users during the warranty.
- 3) You can email to our after-sales department or make a call, please tell us the following information about your cases.
  - Product version and name.
  - Detailed failure situations.
  - The formation of the cases.
- 4) Any problem is same with one of the following cases listed, we will not offer warranty service but offer for charge.
  - Beyond the warranty.
  - Damage due to incorrectly usage, keeping or repairing.
  - Damage due to device assembly operations by the maintenance company non-assigned.
  - No certificate or invoice as the proof of warranty.
  - The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - Damage caused by force majeure.
- 5) This document is just a user manual released with the product, not a quality guarantee. Any corrections or new function introductions added, we will update this document without further notice.

**Remarks:** For any questions or problems, please try to get help from your local distributor, or email PTN at: [support@PTN-electronics.com](mailto:support@PTN-electronics.com).